

## Quick Start Guides: Setting up your Printer



GETTING STARTED

SETTING UP YOUR PRINTER

If you have received a new printer with your assistive technology it will need to be setup. As each printer model is slightly different, we will refer you to each of their setup guides supplied by the manufacturer. There is also a fold out guide written by the manufacturer in the printer box.

When unboxing your printer, it would be helpful to get someone in the household to aid you in getting the printer out of the box and unpackaged to prevent damage to the printer.

Make sure to remove all of the coloured tape stuck to the printer, there may be some at the back near the bottom.

Once you have it all powered up and are choosing how to connect to your computer it is worth thinking about where you live. If you are in student halls or shared accommodation it is recommended you use the free USB cable provided as shared WIFI is not secure and you other people in the household may use your printer.

The three guides below will take you to the setup guides previously mentioned and cover the most common models supplied.

[Canon Pixma TS6250](#)

[Canon Pixma MG5750](#)

[HP Envy 5000](#)

If you are unsure at any point or would like to ask a question please call or email Technical support on the details below.

Email: [support@iansyst.co.uk](mailto:support@iansyst.co.uk)

Telephone: 01223 436 689